


HYDRAJAWS® M0095 Oil Refilling Instructions

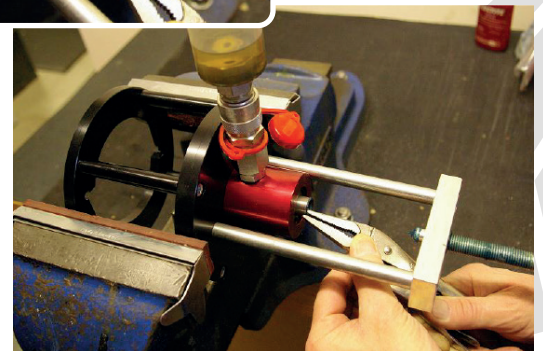

To replenish the oil level:

1. Lay the tester on it's side.
2. Attach the oil bottle and open the lid to allow the oil bottle to breathe.
3. With pliers you will be able to pull the oil capsule which will refill the oil.
4. By pushing and pulling the capsule you will see the oil level move inside the oil bottle and any air bubbles will be removed.
5. Pull the oil capsule back to rest against the cylinder head.
6. Tighten the oil bottle lid and remove.



When full of oil,
the oil capsule
should rest
against the top
of the cylinder.